

Keystone Montageadapter, Unterputz Keystone Mounting Adapter, flush-mounted UM-MA KS Up

Montageanleitung / Mounting instructions

Allgemeines


Der Keystone Montageadapter (im folgenden Adapter) dient zur Aufnahme von maximal zwei Rutenbeck Keystone-Modulen (A, B). Durch den flexiblen Aufbau von Halteplatte (D), schwenkbarer Modulaufnahme (E) samt Positionierhilfe sowie Blende (C) ist sowohl die Schrägmontage (Auslieferungszustand, siehe Abb. 7a) als auch die waagerechte Montage (siehe Abb. 7b) der Keystone-Module möglich. Vervollständigt wird die Montage mit einem TAE-Zentralstück.

Einbauort

Verwenden Sie für den Einbau gemäß DIN 18015-1 ausschließlich Gerätedosen gemäß DIN 49073 mit einer Tiefe von ≥ 60 mm.

Benutzen Sie den Adapter zu keinem anderen Zweck.

Montage

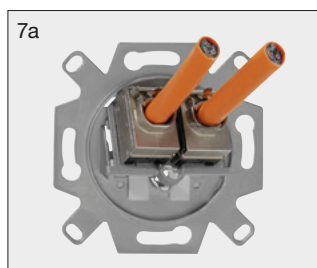

Schrägmontage (Abb. 7a, Rückansicht)

Vor der Schrägmontage prüfen Sie bitte die Tauglichkeit des verwendeten Keystone-Moduls für diese Einbaulage!

- 1 Führen Sie das einbaufertig vorbereitete Keystone-Modul (B) je nach Kabelzuführung (links oder rechts) von hinten (Abb. 3) in die Modulaufnahme.
- 2 Positionieren Sie das Modul mit der oberen Rastnut in der Oberkante (G) der Modulaufnahme und schwenken Sie es nach unten ein, bis die untere Rastnase einrastet (Abb. 4).

Waagerechte Montage (Abb. 7b, Rückansicht)

- 1 Entrasten Sie mittels Schraubendreher (I) die Modulaufnahme über die beiden links- und rechtsseitigen Rastpunkte (H) und nehmen Sie diese aus dem Adapter.
- 2 Ziehen Sie die Blende (C) nach oben und entfernen Sie diese aus dem Adapter.
Für eine eventuell später gewünschte Schrägmontage bewahren Sie die Blende bitte auf.
- 3 Setzen Sie die Modulaufnahme wieder von hinten ein (Abb. 5). Nutzen Sie dabei die Positionierhilfe (J) und rasten Sie die Modulaufnahme plan auf die Rückwand des Adapters.
- 4 Führen Sie jetzt die Module wie gewünscht und zuvor beschrieben ein.

Demontage

- 5 Entnehmen Sie die komplette Modulaufnahme (Abb. 6) samt Modulen aus dem Adapter.
- 6 Lösen Sie das jeweilige Modul durch Druck auf den schwarzen Rastnasenbereich (siehe weißer Pfeil) aus der Modulaufnahme.

Zubehör






Folgendes Zubehör steht zur Verfügung:

- TAE-Zentralstück mit Beschriftungsfeld
Rutenbeck Artikelnummer 139 100 53

(D)

General

(GB)

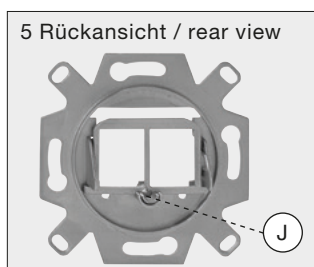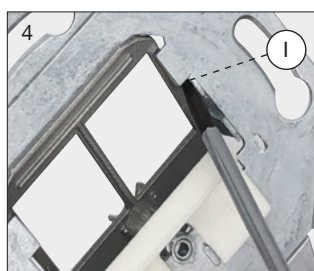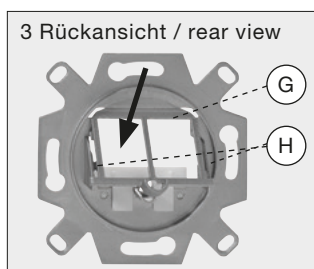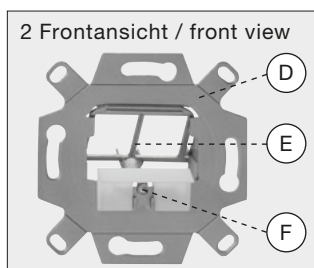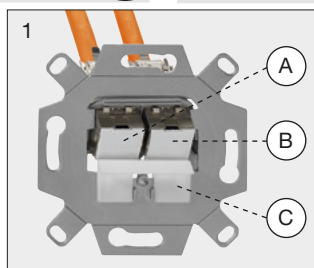

The Keystone mounting adapter (hereinafter referred to as the adapter) is used to accommodate a maximum of two Rutenbeck Keystone modules (A, B).

The Keystone modules can be mounted at an angle (as delivered, see Fig. 7a) or horizontally (see Fig. 7b) thanks to the flexible design of the mounting plate (D), the swivelling module holder (E) including positioning aid in addition to the plastic cover (C).

Installation is completed with a TAE center plate.

Installation site

Only use accessory sockets in accordance with DIN 49073 with a depth of ≥ 60 mm for installation as per DIN 18015-1.

Do not use the adapter for any other purpose.

Mounting



Inclined mounting (Fig. 7a, rear view)

Before inclined mounting, please check the suitability of the used Keystone module for this mounting position!

- 1 Insert the ready-to-install Keystone module (B) into the module holder from behind (Fig. 3) depending on the cable feed (left or right).
- 2 Position the module with the upper latching groove in the upper edge (G) of the module holder and swing it down until the lower latch engages (Fig. 4).

Horizontal mounting (Fig. 7b, rear view)

- 1 Use a screwdriver (I) to disengage the module holder at both left-hand and right-hand locking points (H) and remove it from the adapter.
- 2 Pull the plastic cover (C) upwards and remove it from the adapter.

Please retain the plastic cover in case you wish to mount it at an angle at a later date.

- 3 Insert the module holder again from behind (Fig. 5). Use the positioning aid (J) and snap the module holder flat into the rear wall of the adapter.
- 4 Now insert the modules as desired and as described above.

Demontage

- 5 Remove the complete module holder (Fig. 6) including modules from the adapter.
- 6 Release the appropriate module from the module holder by pressing on the black locking tab (see white arrow).

Accessories

The following accessories are available:

- TAE center plate with labeling field
Rutenbeck article number 139 100 53